

FIG. 1



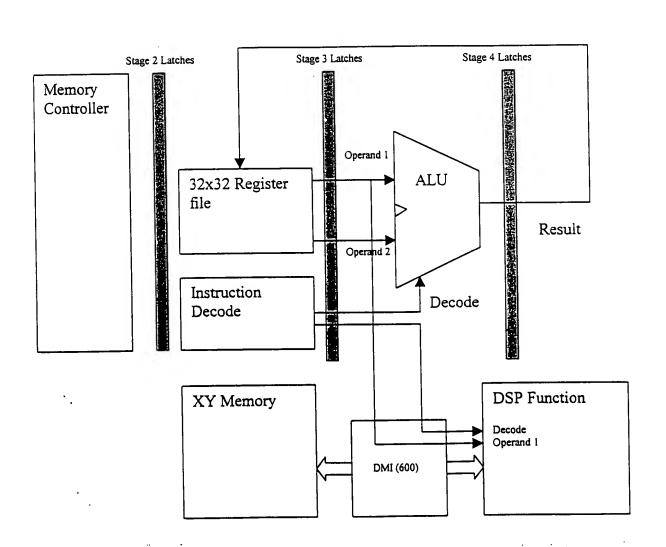


Fig. 2a


F16.3

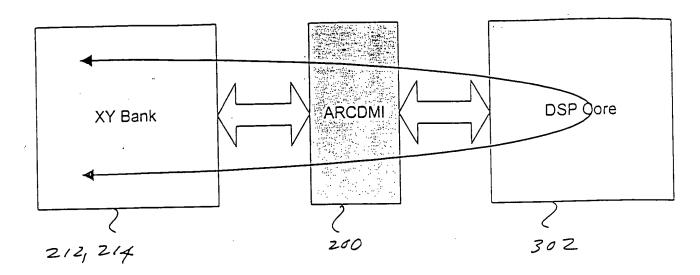


F16.5

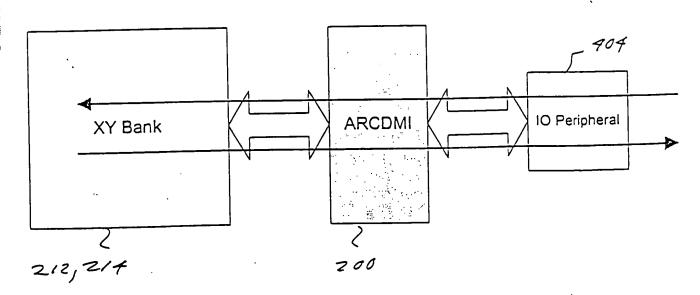

F.6. 4

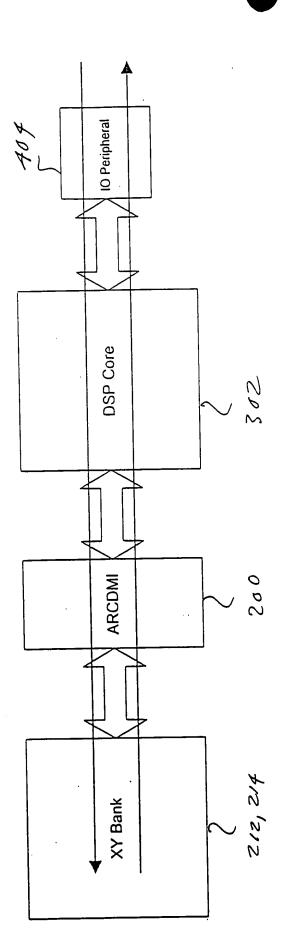



F.6. 6

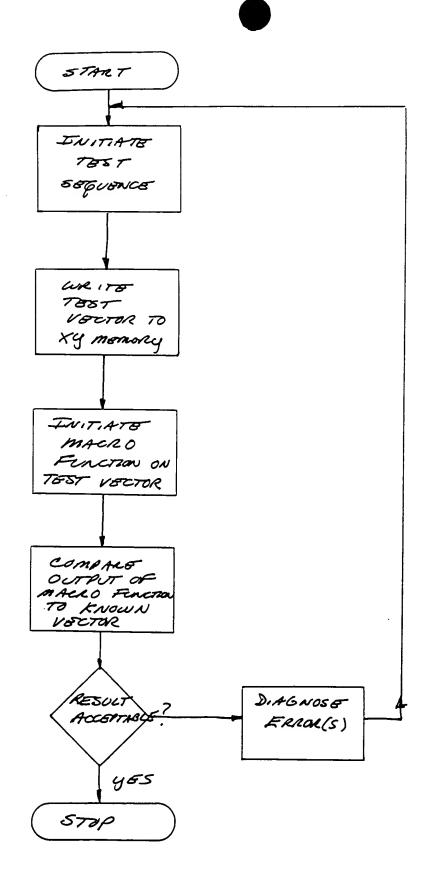


F16.6e

4.1-4

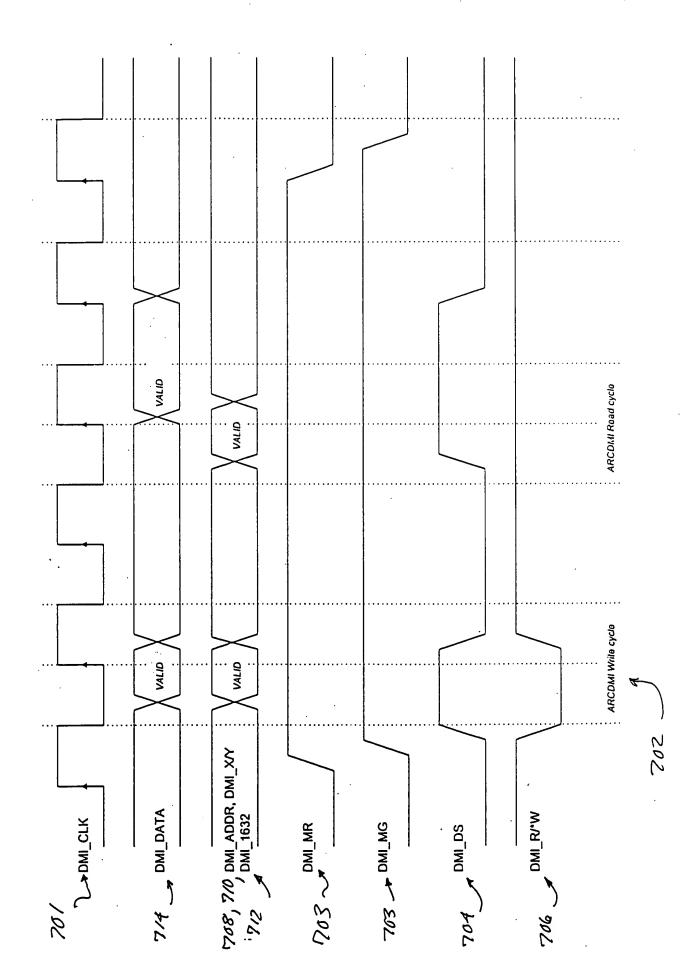


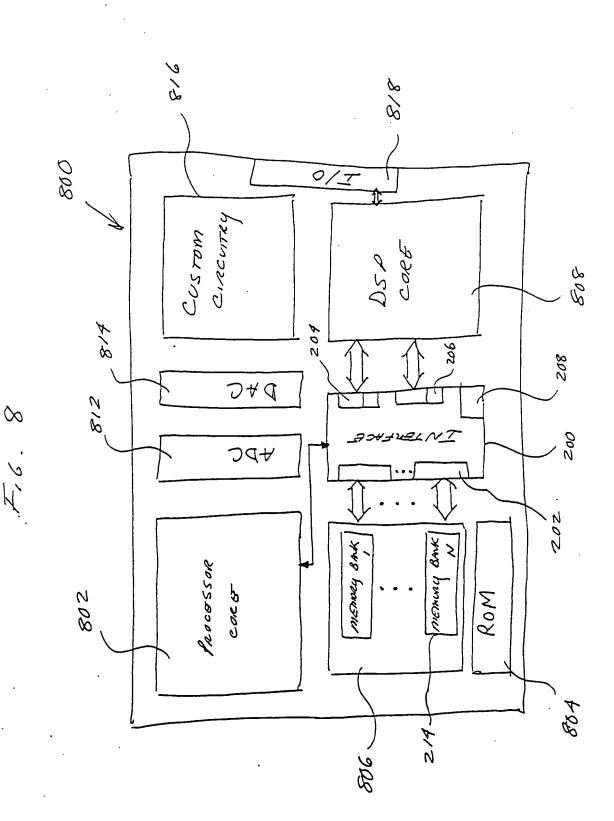


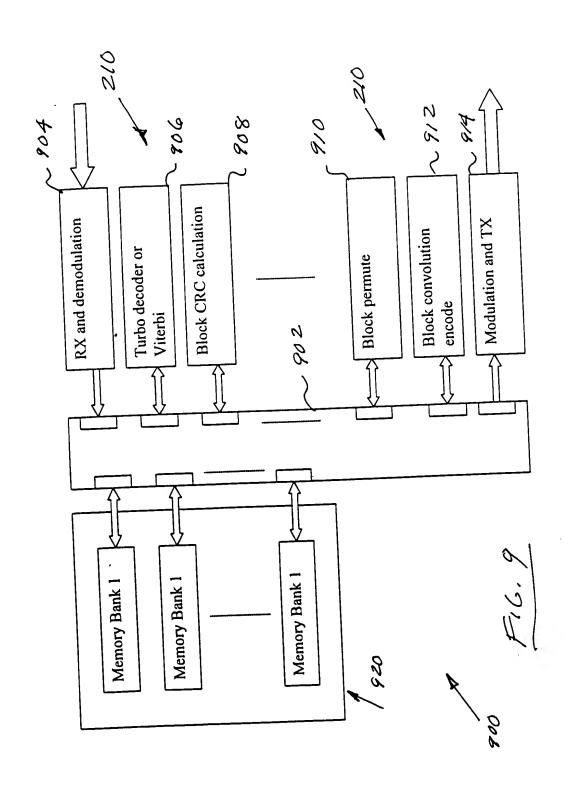


	Data Block 0	Data Block 1	Data Block 2	Data Block 3	Data Block 4	
Bank 0	Function 0	Function 1	Function 2	Function 3	Function 0	
Bank 1	-	Function 0	Function 1	Function 2	Function 3	
Bank 2	-	-	Function 0	Function 1	Function 2	
Bank 3	-	-	-	Function 0	Function 1	

FIG. 9a

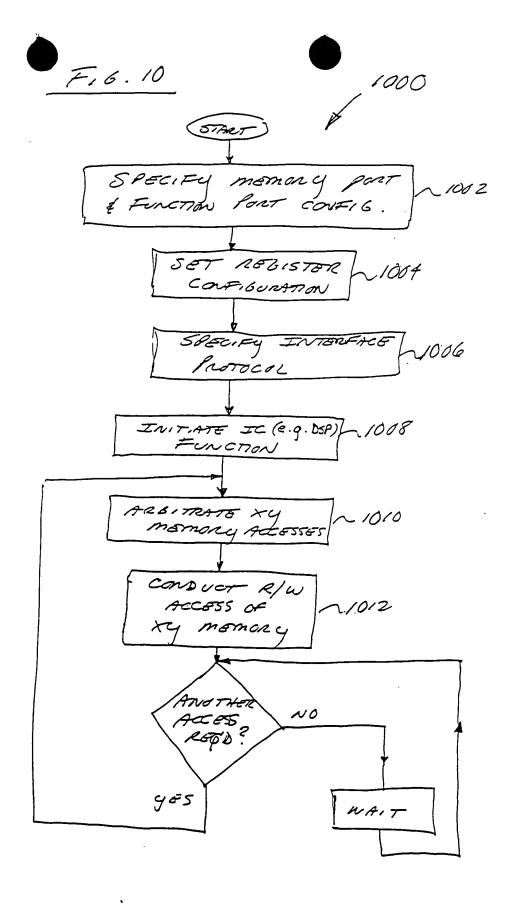

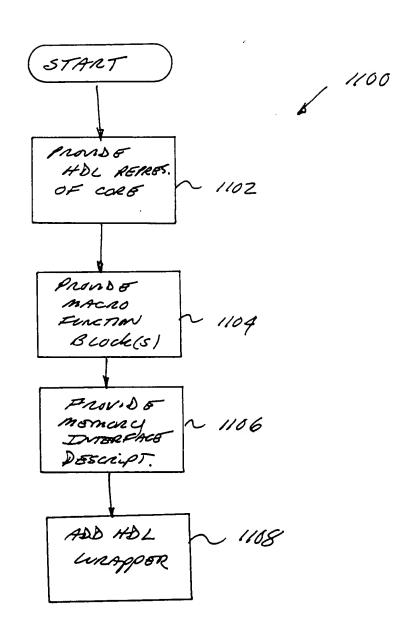

F16.11

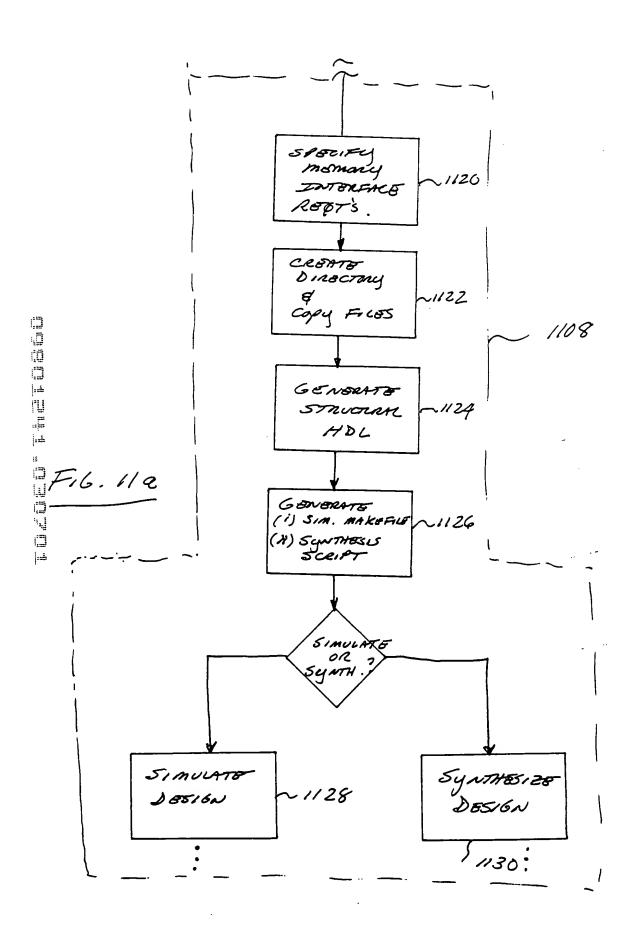

F16. 12 (PART 10F2)

START 1200 PROVIDE HOL CONF DECRIPTION 1202 Praise "SOFT" 1204 FUN ETZON(S) PROUDE MEMONY DESCRIPT. SPECIFY HOST (COLE) 1208 Process ac PARAMOTERS CABATE Directory 21210 of copy Ficos

≟=: ·

